



Panasonic Lumix DMC-ZS25 Power Button Replacement

By replacing the power button, you will be able to power on your camera.

Written By: Abbas Khan



INTRODUCTION

Your camera's power button does not work, here are the steps to replace it.



TOOLS:

- [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Unscrewing your Panasonic Lumix





- Open the four 3.40 mm screws from the right and left sides of your Panasonic Lumix Camera.
- Remove the two 2.60 mm screws located next to the battery.

Step 2



- Use the plastic opening tool to open the outer cover of your device.
 - The easiest place to open your device is from the HDMI port.
- ⚠ Open it gently to avoid breaking the cover.



Step 3

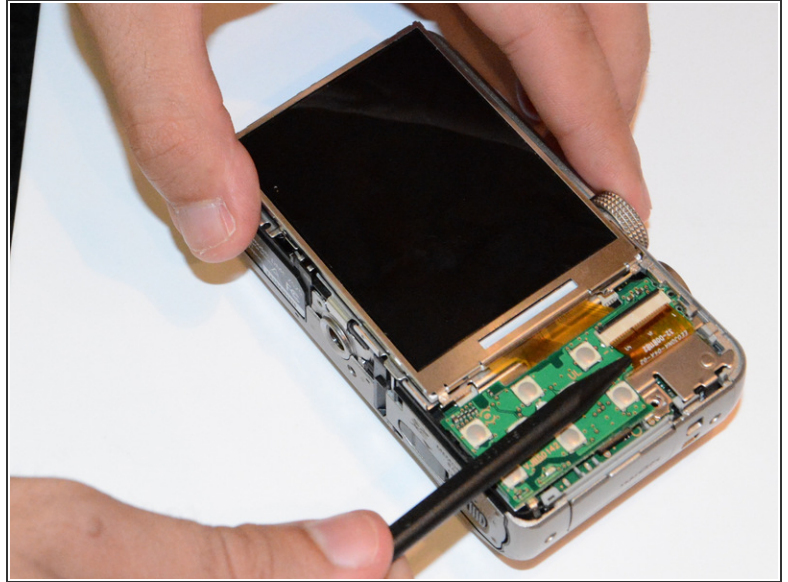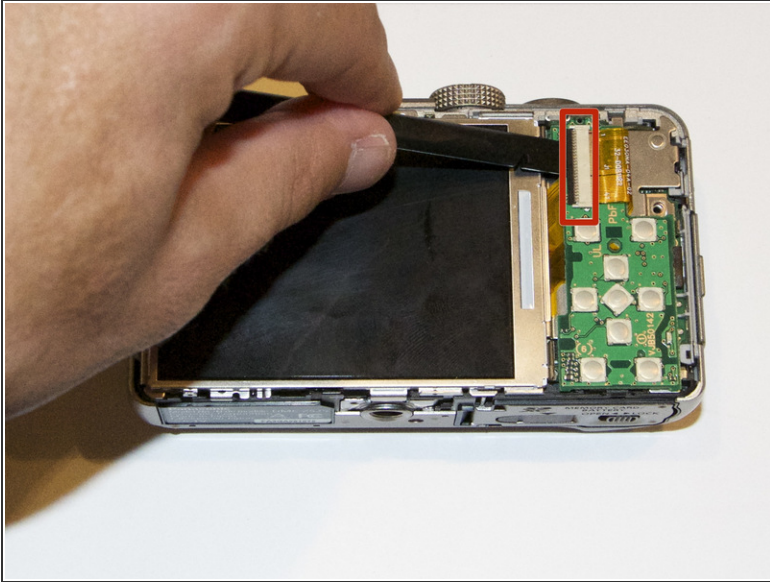

- Use a spudger to detach the ribbon cable.

⚠ Be careful when you use the spudger because you do not want to break the the ribbon.

Step 4

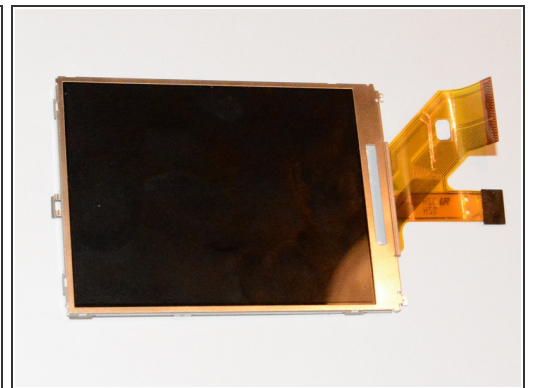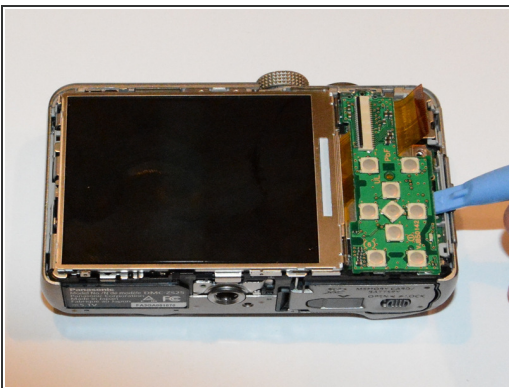


- Remove the button board using the plastic opening tool.
 - Remove the screen. Lift the screen from the opposite side of the HDMI port.
- ⓘ After your hear a "click" sound, you have successfully opened the screen.

Step 5




- Open the two black screws that are located beneath the screen.
- Try to lift it from the opposite side of HDMI using the plastic opening tool.

Step 6

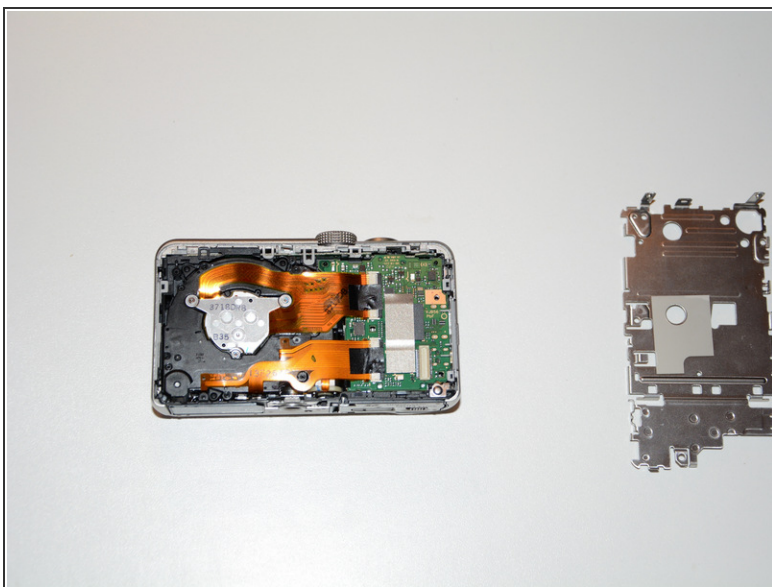


- Separate the device into two pieces as the position shown.

Step 7

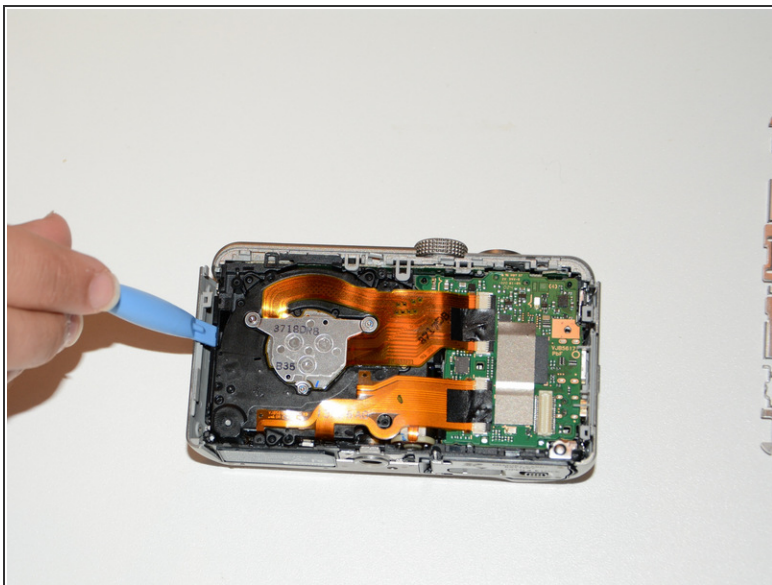

- Use the plastic opener to remove the side covers.


Step 8

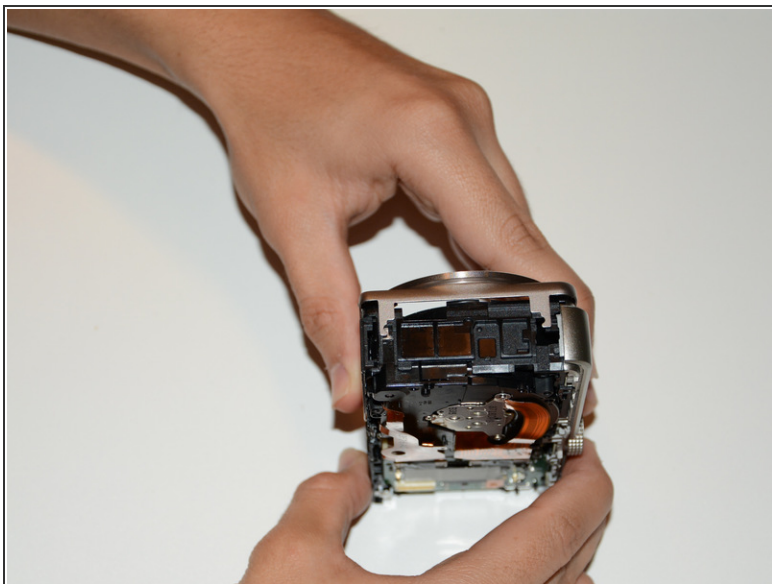

- After removing the side covers, you will be able to take away the front cover with your hands.

⚠ Do not apply too much pressure on the outer cover of your device to avoid damage.

Step 9

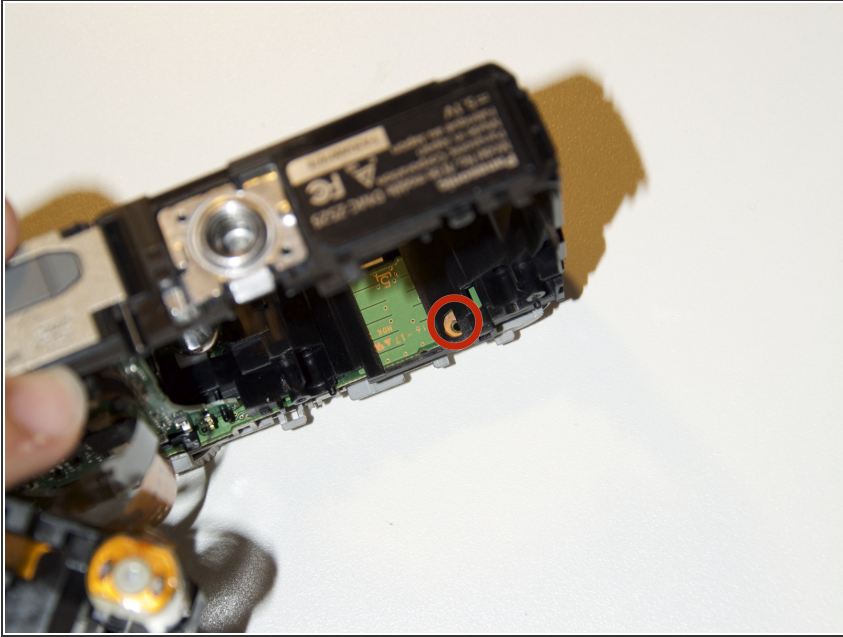


- To release the top part you need to open the 3.70 mm screw shown in the picture.

Step 10



- Unlock the top cover using the plastic opening tool.

Step 11

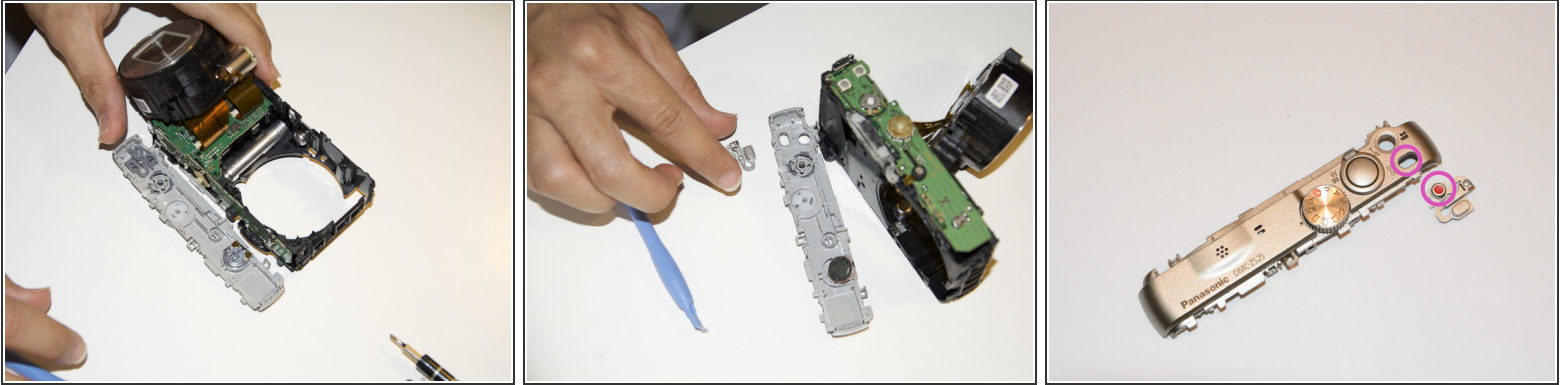

- After removing the top cover of the camera, you will be able to easily remove the power button with your hand.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 01:55:52 PM.